


*torpedo gb writing instruments*

INSTRUCTION MANUAL

## Rollerball pen

1. Unscrew the pen barrel anticlockwise.

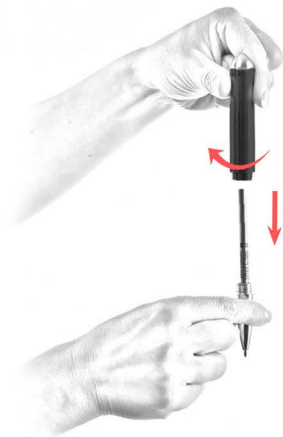

2. Take out the old refill and replace it with the new one.
3. Screw the pen back together.

## Ballpoint pen

1. Withdraw the cap from the barrel carefully.



2. Take off the mechanism on the top of the barrel by twisting it anticlockwise.



## Ballpoint pen

3. Take out the empty refill and replace it with a new one paying attention not to lose the spring.



4. Screw back the mechanism on the barrel by twisting it clockwise.

## Ballpoint pen

5. Join the cap with the barrel gently pressing.



## Cartridge fountain pen

1. Unscrew the pen section.



2. Insert the cartridge until it stops in order to puncture the protection seal.

## Cartridge fountain pen

3. Wait for about 60 seconds for ink to come out of the nib. You can shake it in order to break the air balloon or press it for the first drop to come out.



4. Screw the pen section back into the barrel

## Cartridge fountain pen

5. Wipe the nib clean with a damp, lint-free cloth.





## Converter fountain pen

1. Unscrew the pen section.



2. Twist the end of the converter anticlockwise until it stops.

## Converter fountain pen

3. Dip the entire nib into the ink bottle.



4. Draw the ink into the reservoir, twisting the end of the converter clockwise.

## Converter fountain pen

5. Twist the plastic filling knob half a turn anticlockwise, letting a little ink drip out to release air.



6. Screw the pen section back into the barrel.



## Converter fountain pen

7. Wipe the nib clean with a damp, lint-free cloth.



## FOUNTAIN PEN MAINTENANCE

### Fountain pen maintenance advice

Wash the nib regularly under lukewarm running water, without using any other product. Washing is necessary in cases where the flow of ink is intermittent or has stopped, where the feed system is blocked, if the ink has dried or if the colour of the ink is to be changed. To clean converter pens, fill and empty the reservoir several times until the water runs clear.

Carry the pen with the nib turned upwards.

For optimal function of the models with feeders, fill and empty the feed system with ink twice before using the pen for the first time and subsequently every time after washing. This rule applies to all pens.

Replacing the nib: Should the width of the nib not be the most suitable for your style, the producer will be pleased to replace the original nib free of charge if it is returned as new within six weeks from the purchase from an authorised dealer.

We advise you to use only quality ink by world-renowned producers.

